





# 2016 APPLICATION GUIDE

## Litemate® Vehicle-to-Trailer Wiring System



1. Locate & unplug Factory Connector. (Usually behind tail lights.)
2. Plug Litemate Vehicle Connector into factory plug.
3. Ground white wire to frame.
4. Plug Litemate Trailer Connector into trailer's wiring system.

CARS / VANS / TRUCKS NOT LISTED ON FOLLOWING GUIDE	(Hard Wire)	PART #	CLAM #
Vehicles with RED rear turn signals or with a common bulb for turn signals & brake lights.		6588P	6588PT
Vehicles with AMBER rear turn signals or with separate bulbs for turn signals & brake lights.		6589P	6589PT

ACURA	DATE	PART #	CLAM #	DODGE cont.	DATE	PART #	CLAM #
CL	1997-2003	6756P	6756PT	Caravan & Grand Caravan	2004-2007	6988P	6988
Integra	1994-2001	6756P	6756PT	Dakota Pickup	1987-1994	6986P	6986PT
MDX	2001-2006	6756P	6756PT		1995-2003	6982P	6982PT
RL / TL	1996-2003	6756P	6756PT		2004-2011	6987P	6987PT
SLX	1996-2000	6754P	6754PT	(Factory 7-Way)	2000-2010	6782P	6782PT
<b>AUDI</b>				Durango	1998-2003	6983P	6983PT
Q3 / Q5 (Factory 7-Way)	2009-2015	**6780 or 6781			2004-2009	6989P	6989PT
Q7 (Factory 7-Way)	2007-2015	**6780 or 6781		(Factory 7-Way)	2000-early 07	6782P	6782PT
<b>BUICK</b>				(Factory 7-Way)	late 2007-15	**6780 or 6781	
Enclave (Factory 7-Way)	2008-2016	**6780 or 6781		Journey (Factory 7-Way)	2009-2010	**6780 or 6781	
Rainier	2004-2007	**6780 or 6781		Nitro (Factory 7-Way)	2007-2009	**6780 or 6781	
<b>CADILLAC</b>				Ram Pickup All Sizes	1987-1994	6986P	6986PT
Escalade	1999-2000	6762P	6762PT		1995-2001	6982P	6982PT
	2002-2006	**6780 or 6781		(Cab & Chassis only)	1995-2002	6986P	6986PT
Escalade/EXT/ESV	2007-2015	**6780 or 6781		Ram Pickup 1500	2002-2006	6985P	6985PT
<b>CHEVROLET</b>					2007-2009	6987P	6987PT
Astro (Hard Wire)	1995-2005	6764P	6764PT	(Factory 7-Way)	2000-2009	6782P	6782PT
Avalanche	2002-2013	**6780 or 6781		(Factory 7-Way)	2010-2016	**6780 or 6781	
Blazer (Full Size)	1973-1984	6760P	6760PT	Ram Pickup 2500/3500	2002	6982P	6982PT
	1985-1991	6761P	6761PT	(w/Tow Pkg)	2003-2006	6985P	6985PT
	1992-1994	6762P	6762PT		2007-2009	6987P	6987PT
(Hard Wire)	1995-2004	6764P	6764PT	(Factory 7-Way)	2000-2009	6782P	6782PT
Blazer S-10 (2-door)	1984-1991	6763P	6763PT	(Factory 7-Way)	2010-2016	**6780 or 6781	
	1992-1994	6765P	6765PT	Ram Charger / Trailduster	1988-1993	6986P	6986PT
Camaro (w/o LED Lights)	2012-2016	6892P	6892PT	Ram Promaster (Factory)	2014-2016	**6780 or 6781	
Colorado	2004-2012	6772P	6772PT	Ram Van	1993-1998	6981P	6981PT
(Factory 7-Way)	2008-2016	**6780 or 6781			2001-2003	6782P	6782PT
Corvette	2005-2012	6892P	6892PT	Tradesman Van	2014-2015	6782P	6782PT
Equinox	2010-2016	6774P	6774PT	Sprinter (Factory 7-Way)	2004-2009	6782P	6782PT
Express Van	1996-1999	6768P	6768PT	<b>FORD</b>			
	2000-2002	6771P	6771PT	Aerostar	1997	6883P	6883PT
	2003-2016	6773P	6773PT	Bronco	1980-1986	6873P	6873PT
(Factory 7-Way)	2003-2016	**6780 or 6781			1987-1988	6874P	6874PT
Pickups (Full Size)	1968-1984	6760P	6760PT		1989-1991	6875P	6875PT
	1985-1987	6761P	6761PT		1992-1996	6865P	6865PT
(Old Body Style)	1998-2000	6762P	6762PT	Bronco II	1987-1991	6876P	6876PT
Silverado 1500	1999-2002	6769P	6769PT	Crown Victoria / LTD	1992-1997	6866P	6866PT
	2003-2016	**6780 or 6781		Edge	2007-2010	6892P	6892PT
2500/3500 (New Body Style)	1999-2016	**6780 or 6781		Escape (w/o Tow Pkg)	2001-2004	6868P	6868PT
S-10 Pickup	1985-1997	6761P	6761PT		2008-2012	6892P	6892PT
	1998-2004	6767P	6767PT	(w/Tow Pkg)	2013-2016	**6780 or 6781	
Suburban	1973-1984	6760P	6760PT	Escort Sedan	1997-2001	6883P	6883PT
	1985-1991	6761P	6761PT	Excursion	2000-2003	6883P	6883PT
	1992-1999	6762P	6762PT	(w/Tow Pkg)	2000-2005	**6780 or 6781	
Tahoe	2000-2015	**6780 or 6781		Expedition (w/Tow Pkg)	1997-2003	6882P	6882PT
	1995-1999	6762P	6762PT	(w/o Tow Pkg)	1997-2003	6883P	6883PT
	2000-2015	**6780 or 6781		(Factory 7-Way)	1999-2015	**6780 or 6781	
Tracker	1998-2004	6782P	6782PT	(Factory 4-Flat)	2000-2002	6886P	6886PT
Trailblazer	2002-2009	**6780 or 6781		Explorer	1991-1994	6878P	6878PT
Traverse	2010-2016	**6780 or 6781		(With Converter)	1995-2000	6868P	6868PT
Van (Except Express)	1987-1996	6766P	6766PT	(w/Tow Pkg)	1995-2001	6881P	6881PT
<b>CHRYSLER</b>				(w/o Tow Pkg)	1996-1997	6880P	6880PT
Aspen	2007-2009	6989P	6989PT		2001-2003	6883P	6883PT
(Factory 7-Way)	early 2007	6782P	6782PT		2002-2005	6863P	6863PT
(Factory 7-Way)	late 2007-09	**6780 or 6781			2006-2010	6889P	6889PT
Pacifica (Factory 7-Way)	2003-2008	6782P	6782PT	(Factory 7-Way)	2002-2016	**6780 or 6781	
Town & Country	1991-1995	6987P	6987PT	Explorer Sport Trac (Factory)	2007-10	**6780 or 6781	
	1996-2000	6983P	6983PT	F-Series Pickup	1973-1979	6872P	6872PT
	2001-2003	6984P	6984PT		1980-1986	6873P	6873PT
	2004-2007	6988P	6988PT		1987-1996	6870P	6870PT
<b>DODGE</b>				F-150 (Mfg 1/96 - 10/96)	1997	6882P	6882PT
Caravan & Grand Caravan	1991-1995	6987P	6987PT				
	1996-2000	6983P	6983PT				
	2001-2003	6984P	6984PT				

\*\*Add P - Bagged Program / Add PT - Clam Shell Program



# 2016 APPLICATION GUIDE

FORD cont.				HONDA cont.			
	DATE	PART #	CLAM #		DATE	PART #	CLAM #
F-150 (Mfg. 11/96-04) (New Body Style) (Factory 7-Way)	1997-2004 2004 2008-2015	6884P 6887P **6780 or 6781	6884PT 6887PT 6882PT	Odyssey	1995-2004	6756P	6756PT
F-250 (Light Duty)	1997	6882P	6882PT	Passport	1994-1997	6757P	6757PT
F-250 (Heavy Duty) F-350	1997-2001	6884P	6884PT		1998-2004	6743P	6743PT
	1987-1997	6870P	6870PT	Pilot	2003-2008	6756P	6756PT
	1999-2001	6885P	6885PT	Prelude	2001-2002	6756P	6756PT
	2002-2004	6862P	6862PT	Ridgeline	2006-2014	6738P	6738PT
	1999-2016	**6780 or 6781		<b>HUMMER</b>			
(Factory 7-Way)				H2 / H2 SUT / H3 / H3T	2003-2009	**6780 or 6781	
F-250 & F-350	2009-2016	6891P	6891PT	<b>INFINITI</b>			
Flex	2009-2015	6888P	6888PT	QX4	1996-2003	6753P	6753PT
	2009-2015	**6780 or 6781		QX56 (w/Tow Pkg)	2004-2015	**6780 or 6781	
(Factory 7-Way)				<b>ISUZU</b>			
Focus Wagon	2000-2003	6883P	6883PT	Ascender	2003	6756P	6756PT
	2004-2011	6892P	6892PT		2004-2008	**6780 or 6781	
Mustang (Except Cobra)	1994-2004	6866P	6866PT	Amigo	1998-2001	6743P	6743PT
Ranger Pickup	1986-1992	6871P	6871PT	Axiom	2002-2004	6743P	6743PT
	1993-1999	6879P	6879PT	Cyclone	1991-1992	6761P	6761PT
	1998-1999	6881P	6881PT	Hombre	1996-1997	6761P	6761PT
(With Tow Pkg)	1998-1999	6881P	6881PT		1998-2001	6767P	6767PT
(w/o STX)	2000-2011	6883P	6883PT	I-280	2006	6772P	6772PT
	2011	6892P	6892PT	I-290	2007-08	6772P	6772PT
Taurus Sedan	1992-1995	6867P	6867PT	I-350	2006	6772P	6772PT
	1996-1999	6864P	6864PT	I-370	2007-08	6772P	6772PT
Econoline Van	1992-1994	6868P	6868PT	Oasis	1996-1998	6756P	6756PT
	1995-2003	6883P	6883PT	Rodeo	1992-1997	6757P	6757PT
	2009-2013	6890P	6890PT		1998-2004	6743P	6743PT
	2004-2015	6892P	6892PT	Rodeo Sport	1996-2003	6743P	6743PT
(w/o Tow)	2004-2015	**6780 or 6781		Trooper	1992-2002	6754P	6754PT
(Factory 7-Way)				<b>JEEP</b>			
Transit T-150, T-250, T-350	2015-2016	**6780 or 6781		Cherokee	1976-1982	6949P	6949PT
Windstar	1995-1998	6869P	6869PT		1991-1996	6948P	6948PT
ZX2	1998-2003	6883P	6883PT		1997-2001	6950P	6950PT
<b>GMC</b>					2014-2016	**6780 or 6781	
Arcadia (Factory 7-Way)	2007-2016	**6780 or 6781		Commander (Factory 7-Way)	2006-2010	6782P	6782PT
Canyon (w/o Tow Pkg)	2004-2012	6772P	6772PT	Grand Cherokee	1994-1998	6946P	6946PT
(Factory 7-Way)	2008-2016	**6780 or 6781		(w/Tow Pkg)	1995-1998	6947P	6947PT
Cyclone	1991-1992	6761P	6761PT		1999-2004	6953P	6953PT
Denali	1999-2000	6762P	6762PT		2007-2011	6955P	6955PT
	2001-2014	**6780 or 6781		(Factory 7-Way)	2000-2010	6782P	6782PT
Envoy (Hard Wire)	1999-2001	6764P	6764PT	(Factory 7-Way)	2011-2015	**6780 or 6781	
	2002-2009	**6780 or 6781		Liberty (Factory 7-Way)	2004-2007	6782P	6782PT
Jimmy (Full Size)	1973-1984	6760P	6760PT	(Factory 7-Way)	2008-2010	**6780 or 6781	
	1985-1991	6761P	6761PT	Wrangler / Renegade / YJ	1991-1997	6951P	6951PT
	1992-1994	6762P	6762PT		1998-2004	6952P	6952PT
(Hard Wire)	1995-2002	6764P	6764PT		2005-2006	6954P	6954PT
Jimmy S-15 (2-door)	1984-1991	6763P	6763PT		2007-2016	6956P	6956PT
	1992-1994	6765P	6765PT	(Factory 7-Way)	2004-2016	6782P	6782PT
Pickup (Full Size)	1968-1984	6760P	6760PT	<b>KIA / LAND ROVER / LEXUS</b>			
	1985-1987	6761P	6761PT	Borrego	2009	**6780 or 6781	
	1988-1998	6762P	6762PT	LR4 (w/Tow Pkg)	2013-2014	**6780 or 6781	
(Old Body Style - Classic)	1999-2000	6762P	6762PT	Range Rover (w/Tow Pkg)	2013-2014	**6780 or 6781	
Sierra 1500 (New Body Style)	1999-2002	6769P	6769PT	LX 450	1996-1998	6749P	6749PT
2500/3500 (New Body Style)	1999-2016	**6780 or 6781		<b>LINCOLN</b>			
Safari (Hard Wire)	1995-2005	6764P	6764PT	Aviator	1998-2004	6883P	6883PT
Sonoma / S-15 Pickup	1985-1997	6761P	6761PT	(Factory 4-Flat)	2003-2005	6863P	6863PT
	1998-2004	6767P	6767PT		2006	6889P	6889PT
Savana Van (Full Size)	1996-1999	6768P	6768PT	(Factory 7-Way)	2003-2006	**6780 or 6781	
	2000-2002	6771P	6771PT	Mark LT	2006-2008	**6780 or 6781	
	2003-2015	6773P	6773PT	MKT (w/Tow Pkg)	2009-2014	**6780 or 6781	
(w/Tow Pkg)	2009-2016	**6780 or 6781		MKX	2007-2010	6892P	6892PT
Terrain	2010-2016	6774P	6774PT	Navigator	1997-1999	6882P	6882PT
Vandura (Full Size)	1987-1996	6766P	6766PT	(w/Tow Pkg)	2000-2002	6886P	6886PT
Yukon	1992-1999	6762P	6762PT		2003-2015	6892P	6892PT
Yukon / Yukon XL	2000-2015	**6780 or 6781		(Factory 7-Way)	1999-2015	**6780 or 6781	
<b>HONDA</b>				Town Car	1998-2004	6866P	6866PT
Accord	1994-2002	6756P	6756PT	<b>MAZDA</b>			
Accord (Wagon)	1994-1997	6756P	6756PT	Navajo	1991-1994	6878P	6878PT
CRV	1997-2006	6756P	6756PT	Pickup B-Series	1994-2009	6879P	6879PT
Del Sol	1993-1997	6756P	6756PT	(w/Tow Pkg)	1998-1999	6881P	6881PT
Element	2003-2006	6756P	6756PT	Tribute (w/o Tow Pkg)	2001-2003	6868P	6868PT
	2007-2012	6754P	6754PT		2008-2011	6892P	6892PT

\*\*Add P - Bagged Program / Add PT - Clam Shell Program



# 2016 APPLICATION GUIDE

MERCEDES BENZ	DATE	PART #	CLAM #
GL Class (Factory 7-Way)	2007-2010	6782P	6782PT
M Class (w/Tow Pkg)	1998-2014	**6780 or 6781	
<b>MERCURY</b>			
Grand Marquis	1992-1997	6866P	6866PT
Mariner	2005-2011	6892P	6892PT
Mountaineer	1996-1997	6880P	6880PT
(w/o Tow Pkg)	1997-2000	6868P	6868PT
(w/Tow Pkg)	1996-2001	6881P	6881PT
	2002-2005	6863P	6863PT
	2006-2010	6889P	6889PT
(Factory 7-Way)	2002-2010	**6780 or 6781	
Sable Sedan	1996-1999	6864P	6864PT
Tracer	1997-1999	6883P	6883PT
<b>MITSUBISHI</b>			
Raider	2006-2008	6987P	6987PT
Raider (Factory 7-Way)	2006-2008	6782P	6782PT
<b>NISSAN</b>			
Altima	1997-2001	6753P	6753PT
Armada	2004-2015	**6780 or 6781	
Frontier Pickup	1998-2004	6746P	6746PT
	2005-2015	6736P	6736PT
(w/Tow Pkg)	2005-2011	6752P	6752PT
Pathfinder	1996-2004	6753P	6753PT
(w/Tow Pkg)	2005-2009	6752P	6752PT
(w/Tow Pkg)	2013-2015	**6780 or 6781	
Pickup	1986-1997	6755P	6755PT
Titan	2004-2016	**6780 or 6781	
Xterra (w/Tow Pkg)	2005-2015	6752P	6752PT
<b>OLDSMOBILE / PLYMOUTH / PORSCHE</b>			
Bravada (Hard Wire)	1996-2001	6764P	6764PT
	2002-2004	**6780 or 6781	
Cayenne	2013-2014	**6780 or 6781	
Voyager / Grand Voyager	1991-1995	6987P	6987PT
	1996-2000	6983P	6983PT
	2001-2003	6984P	6984PT
<b>SAAB / SATURN</b>			
9-7X	2005-2010	**6780 or 6781	
Outlook (w/Tow Pkg)	2007-2010	**6780 or 6781	
<b>SUBARU</b>			
B9 Tribeca	2006-2016	6750P	6750PT
Forester	1998-2008	6750P	6750PT
	2009-2016	6734P	6734PT
Impreza Sedan	2002-2007	6750P	6750PT
	2008-2016	6734P	6734PT
Legacy	2003-2008	6750P	6750PT
Outback	1996-2008	6750P	6750PT
	2010-2014	6734P	6734PT
<b>SUZUKI</b>			
Equator (w/Tow Pkg)	2009-2012	6736P	6736PT
(Factory 4-Flat)	2009-2012	6752P	6752PT
Vitara / Grand Vitara	1999-2005	6782P	6782PT
XL-7	2001-2005	6782P	6782PT
<b>TOYOTA</b>			
Highlander (w/Tow Pkg)	2008-2015	6740P	6740PT
	2008-2015	6741P	6741PT
Land Cruiser	1991-1999	6749P	6749PT
Pickup (Except T-100)	1984-1995	6744P	6744PT
RAV4	1996-2000	6747P	6747PT
	2001-2005	6737P	6737PT
4-Runner	1996-2002	6748P	6748PT
Sequoia (w/Tow Pkg)	2011-2014	**6780 or 6781	
Tacoma	1995-2004	6744P	6744PT
	2005-2015	6759P	6759PT
T-100 Pickup	1993-1998	6759P	6759PT
Tundra	1999-2000	6745P	6745PT
	2001-2002	6742P	6742PT
(w/Tow Pkg)	2003-2006	6783P	6783PT
(w/Tow Pkg)	2007-2013	6784P	6784PT
(Factory 7-Way)	2014-2015	**6780 or 6781	

## MULTI-TOW

New or Retrofit Factory 7-Way

6780P / 6780PT

7-Way RV Blade & 4-Way Flat

6781P / 6781PT

6-Way Round & 4-Way Flat



## CHEVY / GMC / OLDS / CADILLAC / HUMMER / BUICK / ISUZU / LAND ROVER / LEXUS / SAAB / SATURN / TOYOTA

1500 Pickups	2003-16	Enclave	2008-16	Rainier	2004-07
2500 / 3500 Pickups	1999-16	Escalade/Ext/Esv	2002-15	Range Rover	2013-14
9-7X	2005-10	Express Van	2003-16	Savana Van	2009-16
Acadia	2007-16	Envoy	2002-09	Sequoia	2010-14
Ascender	2004-08	H2 / H2 SUT	2003-09	Sierra	1999-16
Avalanche	2002-13	H3	2006-09	Suburban	2000-15
Bravada	2002-04	H3T	2009	Tahoe	2000-15
Canyon	2008-16	LR4	2013-14	Trailblazer	2002-09
Colorado	2008-16	LX 570	2008-13	Traverse	2010-16
Denali	2001-14	Outlook	2007-10	Tundra	2014-15
				Yukon / XL	2000-15

## FORD / LINCOLN / MERCURY / NISSAN / INFINITI / KIA / AUDI

Armada	2004-15	Excursion	2000-05	Navigator	1999-15
Aviator	2003-06	Explorer	2002-16	Pathfinder	2013-15
Borrego	2009	Explorer Sport Trac	2007-10	Q3 / Q5	2009-15
F-150 Series	2008-15	Flex	2009-15	Q7	2007-15
F-250 & F-350	2008-16	Mark LT	2006-08	QX-56	2004-15
Escape	2013-16	MKT	2009-14	Titan	2004-16
Expedition	1999-16	Mountaineer	2002-10	Transit	2016
				E-Vans	2004-15


## DODGE / CHRYSLER / JEEP / MERCEDES / PORSCHE

Aspen	2007-09	Grand Cherokee	2011-15	Nitro	2007-09
Cayenne	2013-14	Journey	2009-10	Ram 1500	2010-16
Cherokee	2014-16	Liberty	2008-10	2500/3500	2010-16
Durango	2007-15	M Class	1998-14	Promaster	2014-16

## DODGE / CHRYSLER / JEEP / MERCEDES / MITSUBISHI

Aspen	Early 07	Tracker	1995-05
Commander	2006-10	Vitara	1999-05
Dakota	2000-10	Wrangler	2004-16
Durango	2000-Early 07	XL-7	2001-05

6782P / 6782PT  
7-Way RV Blade & 4-Way Flat

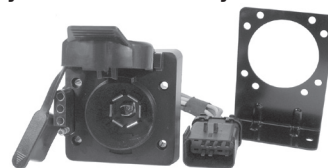

## CHEVY / GMC / BUICK / CADILLAC / SATURN

6785P / 6785PT  
Twist Mount  
7-Way RV Blade & 4-Way Flat

1500 Pickups	2003-13		
2500 / 3500 Pickups	1999-13		
9-7X	2005-10		
Acadia	2007-16		
Ascender	2004-08	Outlook	2007-10
Avalanche	2002-13	Rainier	2004-07
Bravada	2002-04	Sierra	1999-13
Denali	1999-14	Suburban	2000-15
Enclave	2008-16	Tahoe	2000-15
Escalade/Ext/Esv	2002-15	Trailblazer	2002-09
Express Van	2003-15	Traverse	2010-16
Envoy	2002-09	Yukon / XL	2000-15




## TOYOTA

6783P / 6783PT  
7-Way RV Blade & 4-Way Flat

Tundra (w/Tow Pkg) 2003-06

6784P / 6784PT  
7-Way RV Blade & 4-Way Flat

Tundra (w/Tow Pkg) 2007-14

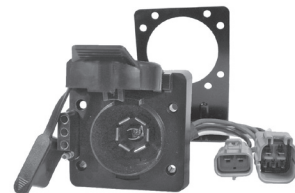

\*\*Add P - Bagged Program \*\*Add PT - Clam Shell Program



# TRAILER CONVERTERS & ADAPTERS

**#6531P (#6531PT)**  
General Purpose Utility Converter for Vehicles with Amber Turn Signals. Light Duty Usage. (60" Wires)

**#6551P (#6551PT)**  
Converter with Circuit Guardian for vehicles with amber turn signals. Protects sensitive on-board computers. (22" Power Feed Wire) Includes Extension #6590P.

**#6552P (#6552PT)**  
Converter with Smart Switch for vehicles with amber turn signals. Protects from self destruction caused by shorts. (64" Long) Includes Extension #6596P.

**#6573P (#6573PT)**  
7-Way RV Blade to Both 6-Way Round Pin and a 4-Way Flat. Universal - Center Pin can be switched Auxiliary or Battery.


**#6574P (#6574PT)**  
Adapter with a 7-Way RV Blade Socket and a 4-Way Flat Female with a 4-Way Flat Male on end.

**#6585P (#6585PT)**  
7-Way RV Blade Female Socket With 6-Way Pin Male Plug

**#6586P (#6586PT)**  
7-Way RV Blade Plug to 7-Way Round Socket Flexible Wires Provide Extra Reach.

**#6592P (#6592PT)**  
6-Way Female Socket with 4-Way Flat Male. For Trailers with 6-Way Round & Vehicle with 4-Way Flat. (4' Long)

**#6593P (#6593PT)**  
7-Way Female Socket with 4-Way Flat Male. For Trailers with 7-Way Round RV Blade & Vehicle with 4-Way Flat. (4' Long)

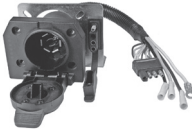

**#6591P (#6591PT)**  
6-Way Round Pin Type Male Plug with 4-Way Flat Female. (8" Long)

**#6594P (#6594PT)**  
7-Way RV Blade Male Plug with 6-Way Round Pin Female Socket. Universal - Center Pin can be switched Auxiliary or Battery.

**#6597P (#6597PT)**  
7-Way RV Blade Male Plug with 4-Way Flat Female.

**#6598P (#6598PT)**  
7-Way Round Pin Male Plug with 4-Way Flat Female.

**#6599P (#6599PT)**  
7-Way RV Blade Male Plug with 5-Way Flat Female.




**#6570P (#6570PT)**  
4-Way Round Male Plug with 4-Way Flat Female.

**#6590P (#6590PT)**  
4-Way Flat Extension for use with 4-Way Flat Connector. (3' long).

**#6595P (#6595PT)**  
4-Way Male Flat Replacement Connector. (4' Long)

**#6596P (#6596PT)**  
4-Way Extension (4' Long) Use between Vehicle Connector & #6593P, or between #6590P & Trailer.

**#6572P (#6572PT)**  
4-Way Flat to 5-Way Flat. Adapts Vehicles to Trailers with Surge Brakes or 5-Way Flat

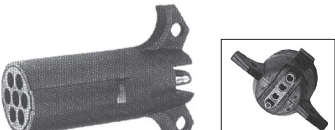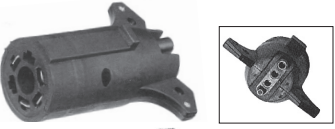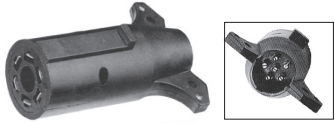

# ELECTRONIC BRAKE CONTROLS & ADAPTERS

For Quick Brake Control Installation When Vehicle Connector Is Present


**#6510PT LED Light Display**  
LED Changes Intensities of Orange/ as Power Setting is Increased  
Protects Vehicle from Trailer Brake Shorts  
Red LED Indicates Short Circuit



**#6511PT Digital Light Display**  
Digital Readout Numerical 5 to 99%  
Set Exact Percent of Power Needed  
Protects from Brake Wire Shorts  
AND Trailer Brake Light Shorts  
Error Codes Identify Shorts



**#6517PT DODGE**  
(with tow package)  
Ram Pickup 1995-09  
Dakota 1997-11  
Durango 1998-09  
Aspen 2007-09

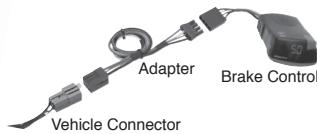

**#6516PT FORD**  
Bronco 1994-96  
F-150 Pickup 1994-08  
F-250/350 Pickup 1994-04  
F-53 2000-14  
Expedition 1997-12  
Excursion 2000-05  
Explorer 2000-16  
Flex 2006-11  
Mountaineer 2002-10  
Van (Full Size) 1994-08  
Windstar 1995-03  
Navigator 1998-12  
LR3 2005-10  
LR4 2010-14  
Range Rover 2005-15  
Lincoln Avitar 2003-05  
Lincoln Mark LT 2007-08  
Lincoln MKT 2010-11

**#6518PT**  
CHEV / GMC / CADILLAC  
Avalanche 2002-06  
Silverado (Classic 07) 1999-07  
Sierra (Classic 07) 1999-07  
Suburban 2000-06  
Tahoe 2000-06  
Yukon 2000-06  
Denali 1999-06  
Escalade 2000-06  
H2 Hummer 2003-07  
H2 SUT Hummer 2003-07

**#6519PT FORD**  
F-250/F-350 Pickup 2005-07  
F-450/F-550 Pickup 2005-07

**#6521PT NISSAN**  
Armada 2004-15  
Titan 2004-16  
Frontier 2004-15  
Pathfinder 2004-15  
Xterra 2004-13  
QX-56 2004-15  
NV Van 2012-16

**#6522PT DODGE**  
Ram Pickup 2010-12

**#6523PT FORD**  
F-150 Pickup 2009-14  
Flex 2012-14  
Lincoln MKT 2012-15

**#6524PT FORD**  
F-250 350 450 550 2008-16  
E-150 250 350 2009-15  
E-350 450 RV 2009-11  
Expedition 2013-15  
Lincoln Navigator 2013-15

**#6525PT**  
CHEV / GMC / BUICK / SATURN  
Enclave 2008-16  
Traverse 2009-16  
Acadia 2008-16  
Outlook 2007-10

**#6526PT DODGE**  
Ram Pickup 2013-14

**#6527PT CHEV-GMC**  
Silverado/Sierra 2014-16